



INSTRUCTION MANUAL

Using our 32W LED light engine. Guarantee one year.

SAFE WARNING:

1. Check supply voltage, whether it matches light engine.
2. Prohibit to place the machine under rain or wet spot, prevent from causing troubles or danger of electric shock.
3. Light engine should be used in a draughty surrounding, not stack other things around it.

PARAMETER:

Supply voltage: 100V – 265 V/AC Power: 32W Power frequency: 50Hz- 60 Hz


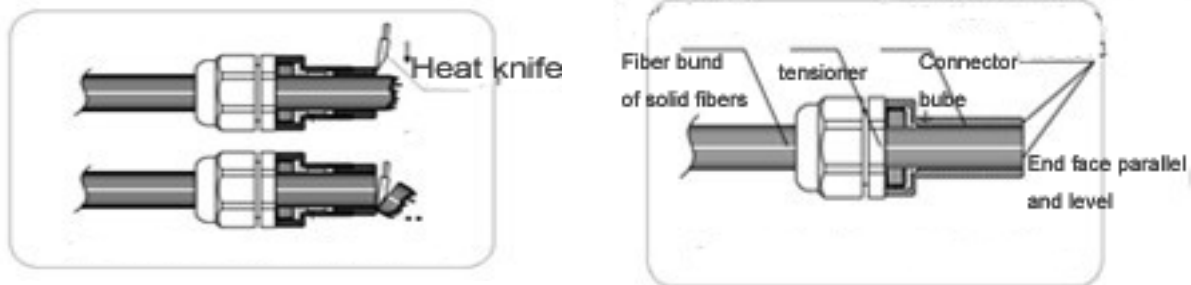


Diagram of using heat knife to cut fiber

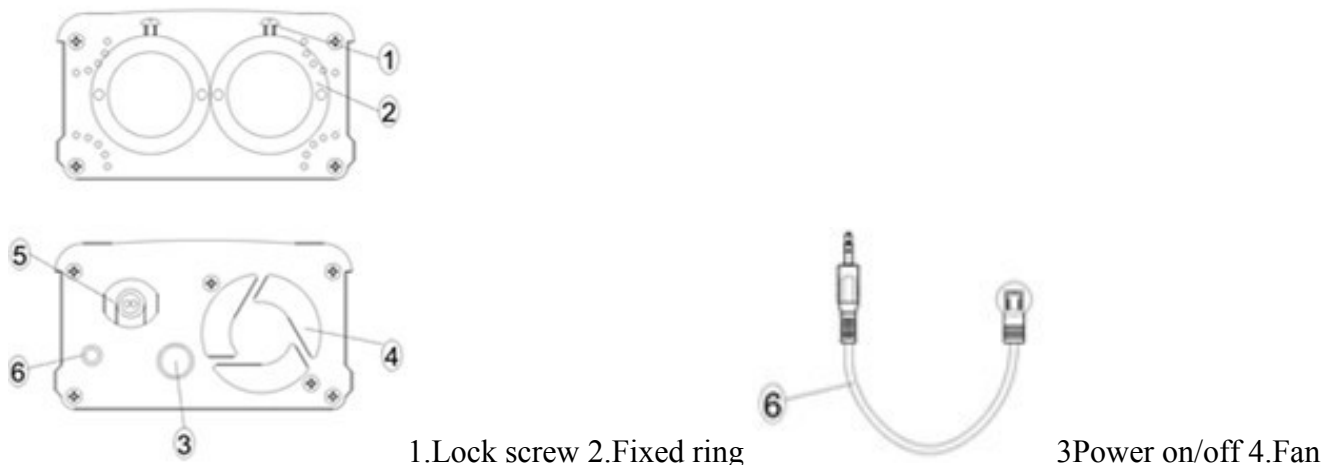

1.Lock screw 2.Fixed ring

3Power on/off 4.Fan

5.Power line 6.Receiver

* Optical fiber connection method with the machine:

Will be the first to use fiber-optic transparent shrink film tied into a bouquet. With a sharp knife to cut the formation of the first optical fiber. And then polished to optical fiber polished head will be inserted to deal with a good optical fiber coupling the first head, coupling head screw clockwise . and then you can screw fastening.